

- a. Turn on/off the Remote Transmitter and the Training Collar (please refer to brief introduction or How to set the Training Collar to work with a Remote Transmitter)
- b. Press the Mode Button to choose V or S mode as your needs.
 - For V mode** vibration mode, there are 9 intensity levels. Please use UP/Down Button to adjust them.
 - For S mode** Static Mode, there are 9 intensity levels. Please use UP/Down Button to adjust them.
- c. Press Transmitter button Y to send the signal to the Collar Receiver

Operation manual between Remote transmitter and the Remote Beeper

Before use, please make sure you already encode the Remote Transmitter with the Remote Beeper, and also choose the right channel.

- d. Turn on/off the Remote Transmitter and the Training Collar (please refer to brief introduction or How to set the Remote Beeper to work with a Remote Transmitter)
- e. Press the Mode Button to choose R, T or L mode as your needs, and then press Transmitter button to send the confirmation signal to the Remote Beeper.

For R mode There are 3 Running Modes. You have three choices of how often the beeper sounds off when your dog is moving.

1. Silence Mode the Beeper will keep Silence when the dog moves and when it stops, it will beep every 2 seconds
2. 5 Second Mode The Beeper will beep every 5 seconds when the dog moves and when it stops, it will beep every 2 seconds
3. 10 Second Mode - The Beeper will beep every 10 seconds when the dog moves and when it stops, it will beep every 2 seconds

For L Mode The Location Mode will disable the Remote Beeper Functions and at this Mode, you could press the Transmitter button to send the signal to the Remote Beeper and the Remote Beeper will play the beeper sound by which you know where the dog is.

For T Mode The Tone Mode could adjust to 9 different Tone sounds.

You could change the Remote Beeper to the different tone sound at any time you like. Please press Mode button and change to Tone Mode. Use UP/Down Button to change to the preferred tone sound. Once decided, press Transmitter button Y to send the confirmation signal to the Remote Beeper.

The Remote Beeper will play the selected sound

Mode	Tone
1	1 Beep
2	Whistle
3	Bird
4	3 Beeps
5	Cricket
6	Starling
7	Hawk
8	Hawk
9	Eagle

Frequency: 433.825MHz

Remote Transmitter: 7.2V 210mAh Ni-MH

Training Collar: 3.7V 230mAh LiP

Remote Beeper: 3.7V 230mAh LiP



Please put the Training Collar and The Remote Beeper as the picture showed on your dog.




Pet_afiner[®] Remote Training and Beeper Collars



Please read the entire guide before beginning

Brief introduction for Remote Transmitter

1. Mode Button: hold over 3 seconds to turn on/off the Remote Transmitter
press the button to choose the different modes there are 5 modes as followings.

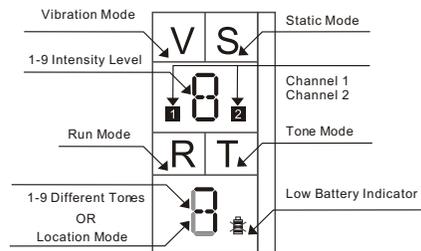


- a. V is the Vibration mode for the Training Collar
 - b. S is the Static mode for the Training Collar
 - c. 0-9 is the intensity Level of Vibration and Static
 - d. R is the running mode for Remote Beeper and also reactivates the Remote Beeper functions after disabled by the Location mode
 - e. T is the Tone Mode and allows to choose from 9 different Remote Beeper Sounds
 - f. L is the Location Mode and also disables the Remote Beeper Functions
 - g. 0-9 is the different tone sound
2. Channel button: Choose the different channels for Training Collar or/and beeper collar
 3. Transmitter button: confirm the operation and send the signal to the collars
 4. Up/Down button: adjust intensity levels of stimulation and choose the different tone sounds
 5. Charging Jack: connect to the charger



Brief introduction for Training Collar

1. Waterproof Training Collar: Corrects the dog behavior by stimulations (vibration and/or shock).
2. On/Off button: Turns the Training Collar on/off. Also set to be ready to encode the transmitter and Training Collar by holding the on/off button for 10 seconds.
3. Receiver indicator Light: Indicates when turned on/off and also serves as low-battery indicator and after charge full
4. Charging Jack with cover: For connecting the charger

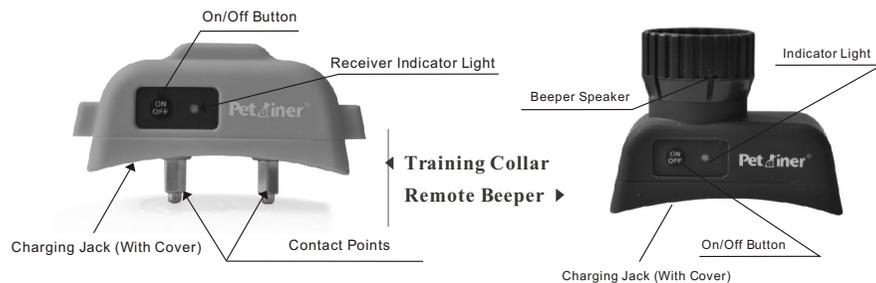

Brief introduction for Remote Beeper

1. Waterproof Remote Beeper: Beeps with a tone and frequency set by the user.
2. On/Off button: Turns the Remote Beeper on/off. Also set to be ready to encode the transmitter and Remote Beeper by holding the on/off button for 10 seconds.
3. Receiver indicator Light: Indicates when turned on/off and also serves as low-battery indicator and after charge full
4. Charging Jack with cover: For connecting the charger

Charging for your devices

- A. Lift the rubber cover protecting the charging Jack
- B. Connect the connector to the Charging Jack
- C. Plug the charger into a standard wall outlet

Low battery and charging indications for Remote Transmitter

- D. Need to charge when the Low battery sign shows up
- E. Please charge it for 3 hours



Low battery and charging indications for Training Collar and Remote Beeper

- F. When in Low battery, the green light will flash every one second changing from flashing twice every one second.
- G. When plugging to charge, the green light will change to the red color without flashing.
- H. After fully charged, the red led light will turn off.



Training Collar

Remote Beeper

How to set the Training Collar to work with a Remote Transmitter

- I. Press the ON/OFF button to turn on the Training Collar, the Green indicator light flashes twice per seconds. Now the Training Collar is in the Standby status.
- J. Turn the Training Collar off (the Green Led light will be turned off)
- K. Press and hold ON/OFF button for 3 seconds, the Training Collar indicator light will come on and keep lighting for 10 seconds. You must encode the Remote transmitter with the Training Collar within these 10 seconds. You could choose channel 1 or 2 by pressing Mode button and then press the Transmitter button Y to confirm. The confirmation must be done within those 10 seconds, otherwise, you have to turn it off and repeat the steps.
- L. For extra Training Collar, just choose the different channel and repeat the above.

How to set the Remote Beeper to work with a Remote Transmitter

- M. Press the ON/OFF button to turn on the Remote Beeper, the Green indicator light flashes twice per seconds. Now the Remote Beeper is in the Standby status.
- N. Turn the Remote Beeper off (the Green Led light will be turned off)
- O. Press and hold ON/OFF button for 3 seconds, the Beeper indicator light will come on and keep lighting for 10 seconds. You could choose channel 1 or 2 by pressing Mode button and then press the Transmitter button Y to confirm. The confirmation must be done within those 10 seconds, otherwise, you have to turn it off and repeat the steps.
- P. For extra Remote Beeper, just choose the different channel and repeat the above.

Operation manual between Remote Transmitter and Training Collar

Before use, please make sure you already encode the Remote Transmitter with Training Collar, and also choose the right channel.