

Instruction Manual

800 Yards Remote Dog Training Collar

Rechargeable & Waterproof & Portable Training Collar with Automation, Static Shock, Vibration, Beep & Intensity Adjustment & LCD Screen

Model Number: 180



⚠ WARNING

Do not use this product for your aggressive dog, or if your dog is prone to aggressive behavior. Aggressive dogs may cause damage to the people or things around. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or certified trainer.

CAUTION:

Risk of skin damage. Please read and follow the instructions. It is important to use the collar correctly. Too tight for wearing may cause skin damage.

*Avoid wearing the collar on the dog for more than 12 hours per day.

*If possible, reposition the collar every 1 to 2 hours.

*Check the collar to prevent excessive pressure, just follow the instruction.

*Never connect a dog rope to the collar, it will cause excessive pressure on the contact area.

*Wash the neck area of your dog and the contact area of the collar weekly with a damp cloth.

*Examine the contact area of dog daily, lest rash or sore appears.

These cautions will help to keep your pet safe and comfortable.

Packing List:

- 1 X Remote
- 1 X Receiver
- 1 X Nylon Belt
- 1 X USB Charging Cable
- 1 X Charger
- 1 X Test Bulb
- 1 x User Manual



MAIN FEATURES

1. Easy-to-use, ergonomic transmitter.
2. Waterproof receiver for bad weather training. Please take off the collar when the dogs go swimming.
3. Rechargeable collar and transmitter.
4. 4 training modes: static shock/ vibration/ beep/ automation.
5. Adjustable Intensity under static shock/vibration/automation mode from 0 to 7 levels show on the screen. If the level set 0, the mode is inhibited.
6. The remote control distance of this product is 800 yards.
7. Two-dog model allows trainers to control two dogs from one transmitter.
8. Power saving design with automatic standby and memory function. NO matching again except the battery is dead.

1. LCD Screen:

The LCD Screen will display different modes of the collar and the different channels for two collar receivers as well as battery indication. Channel 1 /2 will display on the screen.

2. Static Shock Button: Pressing the “Static Shock” button, the receiver will emit static shock. If set level 0, NO shock.

3. Vibration Button: Pressing the “Vibration” button, the receiver will vibrate. If set level 0, NO vibration.

4. Beep Button: Pressing the “Beep” button, the receiver will emit beep sound. How many bars (show on the screen) you set, the receiver will emit the exact times of beep.

5. Automation Button: Pressing the “Automation” button, the receiver will change to automatic mode. Under automatic mode, when the dog yell, the receiver execute what you set such as beep, vibrate and shock. There is a detailed instruction for “How to use” below.

6. Intensity Up/down Buttons: Selects intensity level of vibration static Shock, Selects the sensitivity of automation mode.

7. Channel Button: Pressing this “1/2” button will shift channel between the first and second collar receiver.

8. Model Button: Check the different working mode.

9. Turn on/off the transmitter: Turn on the transmitter by press the “Power” button one time. If the receiver is under the automatic mode, press the “Power” button one time to quit the automatic mode, and press one more time to turn off the transmitter after 4 seconds. If it is not under the automatic mode, press the “Power” button one time to turn off the transmitter after 4 seconds.

10. Charging port: Insert charging cable into charging port to charge the Transmitter.


11. Turn on/off the Receiver: Turn on/off the receiver by press the “Power” button one time.

12. Sensor: Trigger the product to work automatically.

13. Charging port: Charge the Receiver

DESCRIPTION

- ① LCD Screen
- ② Static Shock Button
- ③ Vibration Button
- ④ Beep Button
- ⑤ Automation Button
- ⑥ Intensity Up/down Button
- ⑦ Channel Button
- ⑧ Mode Button
- ⑨ Power Button
- ⑩ Charging port
- ⑪ Power Button
- ⑫ Sensor
- ⑬ Charging port

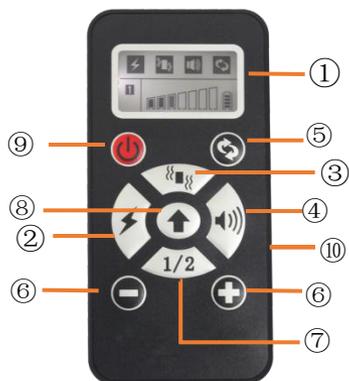

HOW TO USE

Note: Please charge before using the product!

1.Charge the remote transmitter:

- 1) Connect the charger cable to the charging port.
- 2) Plug the charger into a standard outlet.
- 3)The icon of battery will flash.
- 4) Charge the transmitter for about one hour for the first charge or until the icon of battery stops flashing.

2.Charge the collar receiver:

- 1) Connect the charger cable to the DC-5V port.
- 2) Plug the charger into a standard wall outlet.
- 3) The red light will flash on the receiver
(If not or green light ,please plug the charger again).
- 4) Charge the receiver for about one hour for the first charge or until the light indicates charging complete.

3.Connect transmitter and receiver

- 1) Turn on the transmitter.
- 2) Press "1/2" button to choose channel 1 for pairing.
- 3)Turn on the receiver
- 4)Press the "Power"button on the receiver again.
- 5) After a beep from the receiver, press the "Vibration button" within 30 seconds for pairing.
- 6) The collar receiver will beep if connected successfully.
- 7)If the pairing were not successful, please repeat the 3-5 steps.
- 8) To match the second receiver, press the "1/2"button and select for the second receiver and follow the same procedure.

4.How to change to fully automation mode:

Press down the“Automation” Button and the receiver will send out “Beep Beep” sound which indicates that it is changed to the automation mode.

5.How to test automation mode:

Under automation mode,to blow the product, the product will first sound and vibrate then shock.

6.How to adjust the sensitivity under the automation mode:

After entering into the automation mode, press down "+"or"-" button to adjust the sensitivity and **press the automation button again.**(The level 7 is the most sensitive,the level 1 is the most insensitive.)

7.How to adjust the level of the vibration and shock under the automation mode:

Switch to the manual mode, press the "+" or "-" button to adjust to the level of vibration and shock that works best with your dog, then press the “Automation” button again to re-enter automatic mode.

Adjust the level in accordance with the adaptation of the dog. So you can set up what kind of stimulus apply to dogs,The unwanted function can be adjusted to level 0. the mode will be inhibited.

Case 1: I only need the beep function.

Adjust to level 0 of the vibration and shock and press the “automatic mode” button to confirm. The receiver will only make beeps under automatic mode.

8.What is the Automatic Anti-bark mode?

Under the automatic mode, when the dog barks, the receiver will first make a sound and then vibrate and shock at last. Before you enter this mode, be sure to set the level of vibration and shock. We recommend beginning with lowest vibration and shock level.

9.How to quit the automatic mode:

Press the “Power” button of the transmitter one time, and the receiver will emit a beep sound. The automatic mode on the screen of the transmitter will stop flickering, when it quits the automatic mode. Turn off the receiver or press the function button (shock/vibration/beep) to transfer to manual mode to quit the automatic mode.

Notes

1.. In common, if the battery is full, the receiver can work for 10 days, and the transmitter 20 days.


2.Training course should be kept positive and short, 10-15 minutes for each course is recommended.

Operation Steps:

1. Turn on the transmitter



2. Turn on the receiver

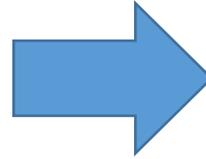

3. Press the the "power" button once again, the red light will light up and you will hear "Beep"



Note:

In automation mode, the sensitivity can be adjusted. Please choose the correct sensitivity level, according to your dogs. You can refer to page 5, the sixth step.

Under automation mode, in order to ensure the safety of the dog, the product will enter the protected phase after work for 5 times consecutively. It is required to wait for 1 minute or press the "Automation" button to activate

4. Press the "Static Shock" button on the transmitter, and you will hear "Beep" again which means this product has been matched complete. Use the test bulb to test the shock.




How to test automation mode:

2.This means that it is already in automation mode



1.Press the “Automation” button of the transmitter, you will hear “beep beep” from the receiver

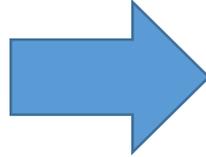

3.Connect the Test bulb to the mental screws on the receiver.To blow the product, the receiver will beep first and vibrate shock afterwards.
If you want to adjust the sensitivity level,you can refer to page 5,the seventh step.




How to use two receivers at the same time:



1.Press the “1/2” button to choose channel 1 for pairing, then follow the “Operation Steps” to pair it.

8

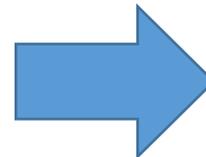

2.Press the “1/2” button to choose channel 2 for pairing, then follow the “Operation Steps” to pair it.

9

Important Notice:

1. The transmitter will be changed to Standby Mode if there is no operations after 5 seconds .The receiver will be changed to Standby Mode if there is no operations for one minute. Any movements or bark from the dog will activate the receiver.
2. Press "1/2" button for selection. Channel 1 controls the first receiver and Channel 2 controls the second receiver.
3. In working mode, if you want to reconnect the receiver to the transmitter, simply press the "Power" button, there will be a beep sound indicating that it is ready to be matched.
4. The design of the receiver is rainproof. The rubber cover has to be put in the right position to ensure rainproof effect.
5. Test static shock function:
 - 1) Place the Test bulb to the metal screws (ensure the metal points are attached when test the shock function).
 - 2) Press the "Static Shock" button, and the LED light will flash on.
6. how to choose the right shock level?

When the dog's weight is less than 11lb, it is recommended to use vibration

When the dog's weight: 11-22lb, it is recommended to use the 1 level shock

When the dog's weight: 22-33lb, it is recommended to use the 2 level shock

When the dog's weight: 33-44lb, it is recommended to use the 3 level shock

When the dog's weight: 44-55lb, it is recommended to use the 4 level shock

When the dog's weight: 55-66lb, it is recommended to use the 5 level shock

When the dog's weight: 66-77lb, it is recommended to use the 6 level shock

When the weight of the dog is more than 77lb, it is recommended to use the 7 level shock

When using the electric shock, please select the appropriate electrical shock level according to the weight of the dog.

Frequently Asked Questions

Q: Under the condition of auto mode, why the dog taking it to run can trigger the receiver to work automatically?

A: Please adjust to the appropriate sensitivity, 0 level refers to the most insensitive, 7 level refers to the most sensitive.

Q: Which part of the dog's body can put the receiver ?

A: Below the throat

Q: When turn off the remote controller, why the receiver still in work?

A: The remote can not turn off the receiver, it is not work like your TV remote, if you do not want to use the collar, please turn off the receiver via its own on/off button.

Q: Why the receiver cannot flash red light during the course of charge? Can it be filled into electricity?

A: Of course, please insert the data line again. Meanwhile, please use the configuration charger and you cannot use this charger that current exceed 1A.

Q: Why people sometimes cannot control the receiver?

A: Under the condition of rest, the receiver can turn into sleep mode automatically after 1 minute. Shaking gently can wake up the receiver. or you can press "automatic button" to active it.

Q: How long is the lifetime of the lithium battery ?

A: Our Lithium battery can charge 2000 times for Remote Controller and Receiver Collar.

Q: How long can I remove the Receiver Collar from my dog?

A: The Collar is not designed to be worn constantly. We recommend the Collar not be worn for more than 12 hour of every 24-hour period.

Q: How long should I process my training session for my pet?

A: Training sessions should be kept positive and short ,it is better for about 10-15 minutes each time.

Q: What kind of dogs are your training collar suitable for?

A: The collar is adjustable from length 5.9"(15cm) to 19.6"(50cm), if your pet's neck is smaller than 5.9", you have to rethread it.

General Training Tips

The following tips will show you how to get the best performance out of your Dog Training Collar.

- (1) Make training sessions short and positive (about 10-15 minutes for each session.) This will enable the dog to focus on the trainer.
- (2) Training one dog each time is recommended.
- (3) During the first initial training sessions, keep the dog in a familiar outdoor environment. Training in a place that the dog is not familiar with may make the dog become distracted.
- (4) Use a long leash fastened to a non-metallic collar to help the dog to learn. Ensure that the additional collar and lash does not interfere with the Contact Points of the Collar Receiver. Do not use the remote training collar without a long leash unless your dog is fully trained.
- (5) More success will occur by teaching the dog a command first before trying to reinforce the command with the Remote Transmitter.
- (6) For basic obedience training, vibration is more useful.
- (7) Issue one obedience command each time, this will reduce confusion and allow the dog to remain focused. Do not use the training system for commands that the dog has not learned.
- (8) During training, look for all the positive changes in the dog's behavior and remember to encourage it promptly with ample praise and reward.
- (9) Do not use the training system to correct or eliminate aggressive or biting behavior. When the dog is showing signs of aggressive behavior, contact a professional dog trainer in your local area immediately.
- (10) Please keep in mind that training sessions should be kept short. Stop Training and play with the dog when the dog has made progress.