

5. Presently, this product is the most effective and safest tool for training pet. following the correct operational instructions, you can effectively train the pet and bring it on harm.

Frequency: 433MHz  
 Transmitter: 6F22/9V  
 Receiver: 3.7V 250mah Lip



Note: Please take out the batteries if you don't use it for a long time.

## Remote pet training collar

Rechargeable and waterproof — X600



1. Antenna
2. LED light
3. Indication light
4. LCD display
  - ☐ 1-100 level
  - ⚡ Static shock mode
  - 🔊 Vibration mode
  - 🔊 Beep mode
  - 💡 Light mode
  - 1 Channel 1
  - 2 Channel 2
  - 3 Channel 3
5. Up/down button
6. LED light button
7. Launch button
8. Mode button
9. Channel button

### \*Features

1. Big LCD display.
2. 100 levels (optional)/static/vibrate/beep
3. The level can be altered by use of up & down button.
4. A tone button activates a lone on the Collar Receiver.
5. The system can be used up to 3 receivers (expandable 3 dogs).
6. The Collar Receiver will turn off if it is unused for 4 minutes.
7. Any movement will activate the collar receiver into STANDBY MODE.
8. The transmitter will go into STANDBY MODE if there is no operation after 20 seconds and turn off after 2 minutes.
9. Rechargeable the collar receiver and waterproof.

### \*How to use the Transmitter

1. Install the battery (1\*6F22/9V) in the transmitter—ensure the polarity is correct.
2. Press mode button for 3 seconds and transmitter will be TURN ON automatically and it will go into STANDBY MODE if not operated for 20 seconds and will TURN OFF if not operated for 2 minutes.
3. Press Mode button to choose the different mode (sound, vibration and static shock) and press the Up/Down button to set level.
4. Choose the different channels up to 3 receiver.
5. In standby mode, to turn on the transmitter, hold button at least 5 seconds, will wake it up.

Notes: These three modes could be combined freely, so please set those modes you don't want at the level " 0 " .

Always turn on the transmitter when you change the new battery every time.

### \*Prepare the Collar Receiver

How to charge the Collar Receiver

1. Connect the charger connector to the charging jack.
2. Plug the charger into a standard outlet (DC-5V), the red LED light in side the Collar Receiver will be flash.
3. Charge the Collar Receiver at least 5 hours for the first charge.
4. After fully charged, the red LED light will be light.
5. When charging is completed, replace the rubber cover.

Notes: Low battery indicator: the Collar Receiver will keep beeping for 2 minutes unless it gets charged.



### \*Connect the transmitter with the Collar Receiver.

1. Turn on the Transmitter and choose 3 channels to encode.
2. lift the Reset part of rubber cover in the Collar Receiver.
3. To turn on the receiver, with a pen or paper clip, press the on/off button, the Collar Receiver will beep—it is now encoded to the transmitter.
4. To turn off the receiver, with a pen or paper clip, press and hold the on/off button for 3 seconds, the red LED light it turned off.
5. After turning on the receiver, the Receiver is in the working mode and you could encode the transmitter and the Receiver with in 20 seconds.
6. In the working mode, if you want to reencode the Receiver, simply with a pen or paper clip, press the on/off button, there is a beep sound to indicate that it is ready to encode.

### \*Mistake prevention function

To prevent your pet from the mistake operation, this system set the working time up to 10 seconds each time.

Then you have to repress the operation button again to keep operation.

### \*How to check the static is working

1. Use the test light LED—provided. attach the light to the metal probes—select Static mode—you can see static symbol on the screen—press the launch button—the LED light will flash on.
2. Select a low number on the LCD display—put your fingers on the metal probes and press the launch button.

### \*Notes for use:

1. The lifetime of the batteries vary according as how often you use the product. Therefore you should often check the batteries by hearing the beep from the Collar Receiver and watching the indicator sign on the LCD screen of the transmitter.
2. The valid distance of remote control means the straight-line distance between the transmitter and the Collar Receiver without obstacles in between. if there are interference signals or signal screening around, the actual remote control distance may vary.
3. This product is for pet training. only by training, the pet can understand the intention of its owner. good effect can only be achieved after a period of training.
4. Training sessions should be kept positive and short, about 10-15 minutes long each time.